 


I. Preface

 
First of all, we'd like to express our thanks for using this product. For your better understanding the product performance, please kindly read this manual carefully before operating ARES.

II. Package and Accessory


Please check the outer look of product after unpacks. If find any physical damage, please contact the dealer for exchange.




Internal SATA II HDD Mobile Rack



 M3 x 6 screw *4 pieces
#6-32 screw *4 pieces
miniature key *2 pieces




Manual

 

HDD Access Cable x 1pc

III. Appearance

1-1 Front Panel Description:

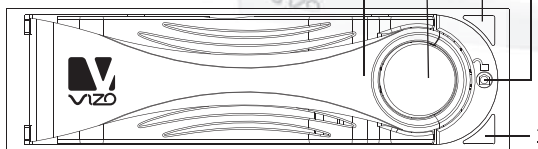

1.HDD Access Indicator 3.Release Button 5.Key hole
2.Power Indicator 4.Handle

1-2 Power and HDD Access indicator:

When power is turned on, signals will display as follow.


LED Indicator	Color
Power On	Green
HDD Access	Blinking Amber

1-3 Key lock description :

Segment \ Status	Security status
⬆	Unlocked (Removable)
⬇	Locked (Non-removable)



 
1-4.HDD Access signal cable connection (Red+Black-):




IV. Installation

Step1:

1-1. Push the release button to semi-auto eject the handle.(a)

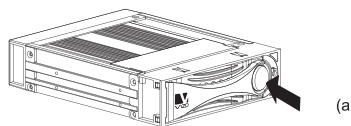


1-2. Release the tray from housing by pulling the handle to draw it out. (b)

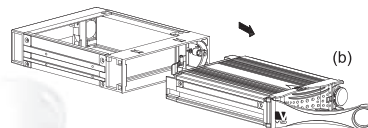


Step2:

2-1. Press the latch and slide the top cover backward.(c)

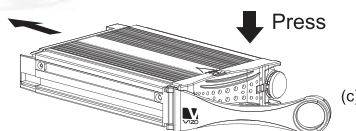


Step3:

3-1. Position the HDD into the tray and secure it with four #6-32 screws.(d)

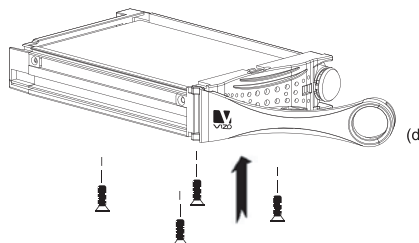


Step4:

4-1. Place the top cover on the tray and slide it forward to secure.(e)

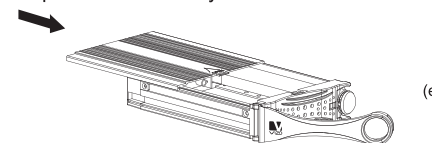


Step5:

5-1. Insert the tray into the housing and push it back gently.(f)

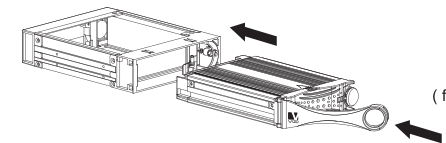


5-2. Push the handle back to its original position.(g)

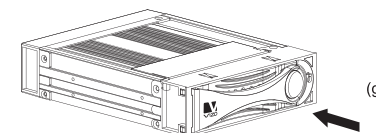

Step6:

6-1. Mount the mobile rack into computer chassis. Then connect the SATA cable and DC power cable to the back panel of mobile rack.(h)

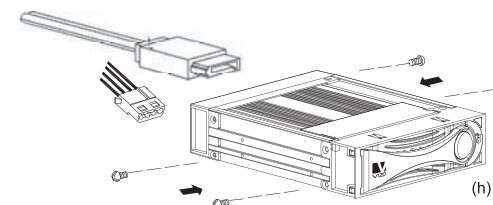

6-2. Insert the miniature key and turn it counter-clockwise to secure the handle.(Refer to Appearance section 1-3 Key Lock Description)

6-3. It is not necessary to connect the power supply connector when power supply is provided with SATA 15pins power connector. Users can decide which power connector they want to use.

V. Technical Support and Contact

During installation or operation, if you have any problems, please feel free to contact the local reseller for help. Or you could request technical support via
WEBSITE : www.vizo.com.tw
E-MAIL : sales@vizo.com.tw